




Smart Lock User Manual







Special Attention:

1. Mechanical keys please keep outdoor, just in case keys lock in doors.
2. Please charge for the battery when low wattage alarm.
3. Reading this manual carefully before installation, and keep it for future reference.

1. Lock Structure

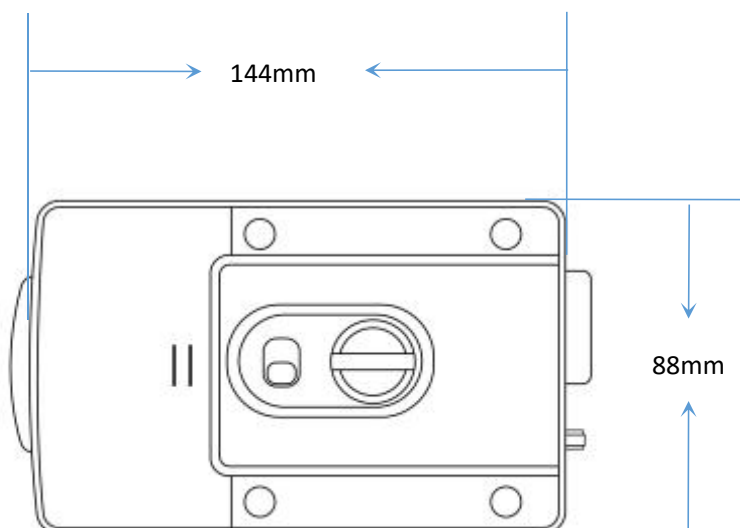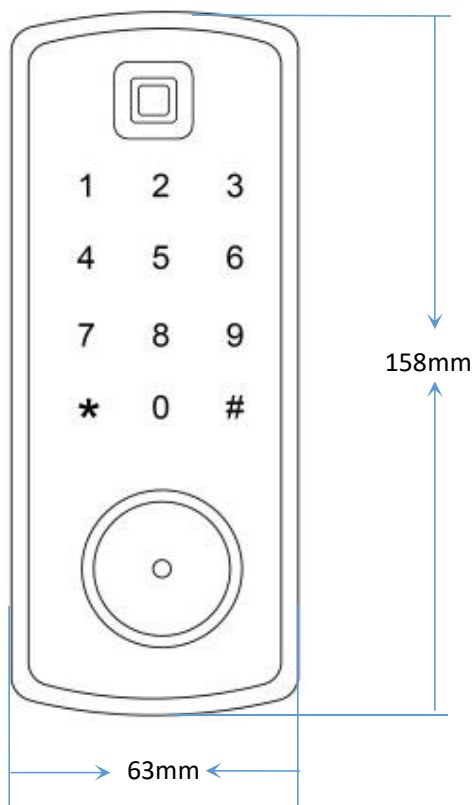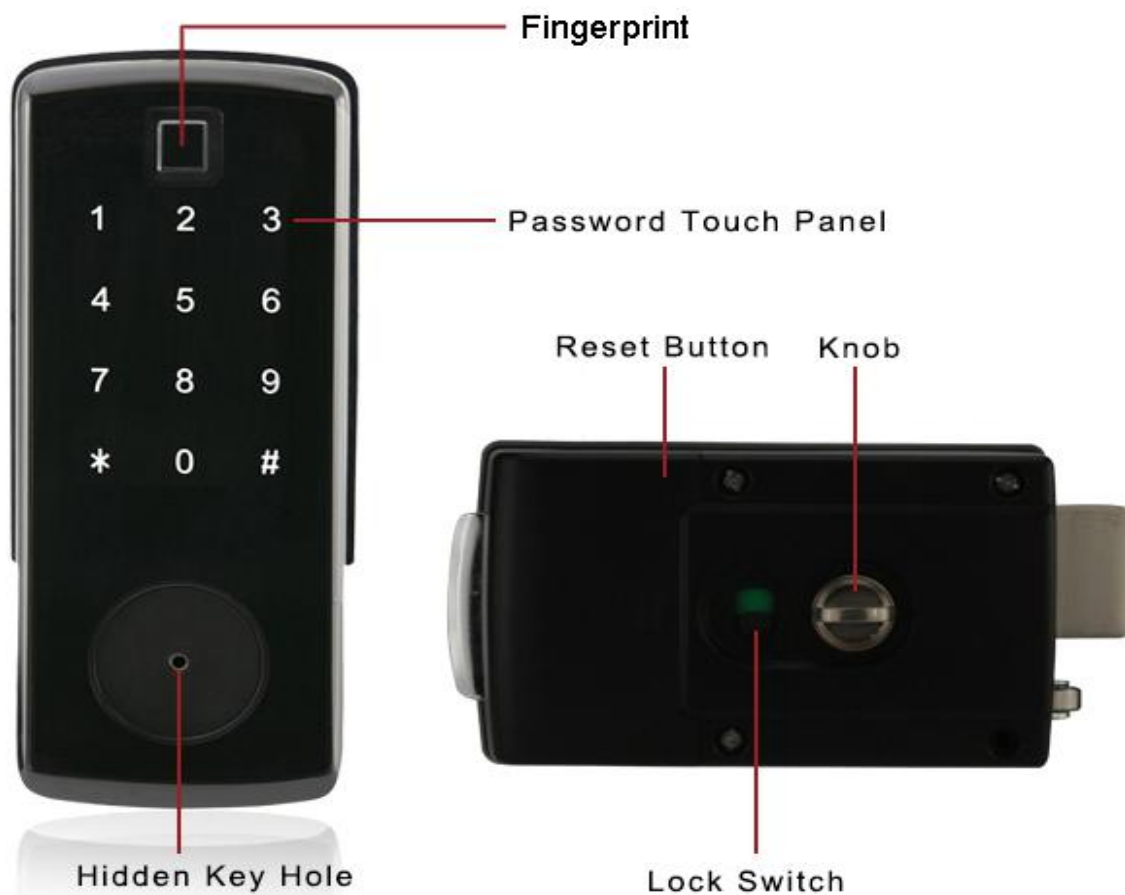


2. Installation

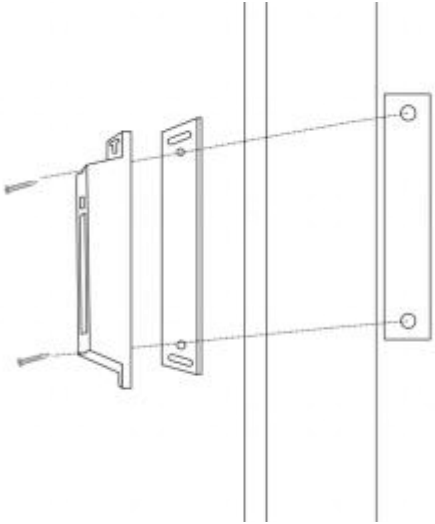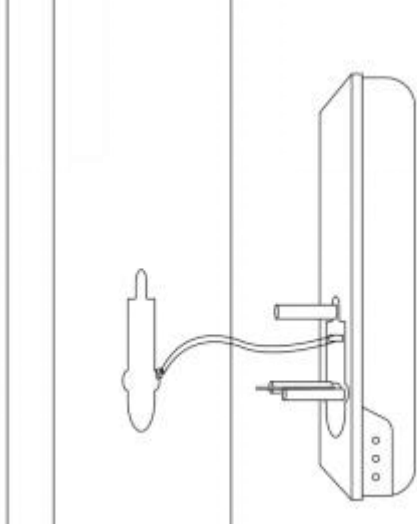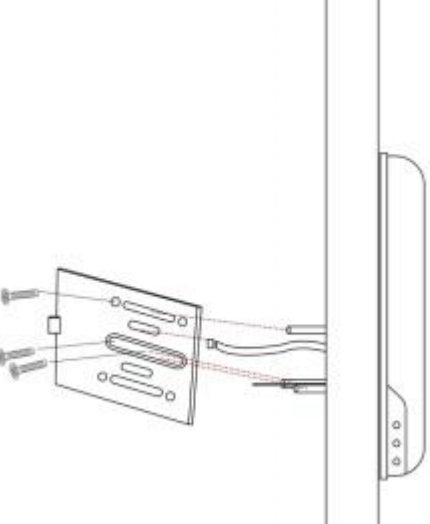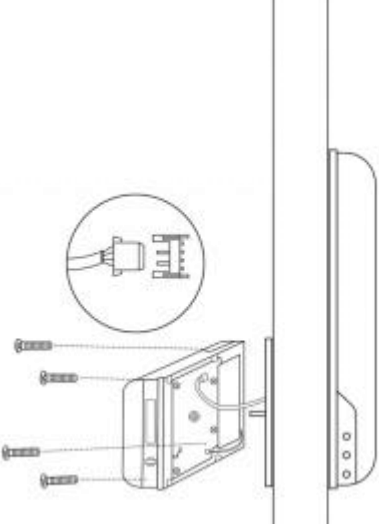Step1 Install strike box	Step2 Install front panel
	
Step3 Fixed front panel	Step4 Install rear panel
	

3. Specifications

Suitable for Models	M02B
Materials	Zinc Alloy
Lock Size	Front: 158*63*20mm Rear: 88*144*40mm
Unlocking way	Fingerprint Password Card Mechanical key
Colour	Black
Doors Applicable	Wood Door/Iron Door
Door Thickness to Fit	30-60mm
Working Voltage	6V (4x AA Batteries)
Low Wattage Alarm	Below 4.8V
Battery Life Span	Support 10,000 Times of Locking & Unlocking Operation
Working Temperature	-20°C-70°C
Working Humidity	20%-90%
Data Capacity	1 admin+200 Fingerprint/code/card
Card Type	MF1 Card
Distance to Sense Card	<25mm

4. System Initialization

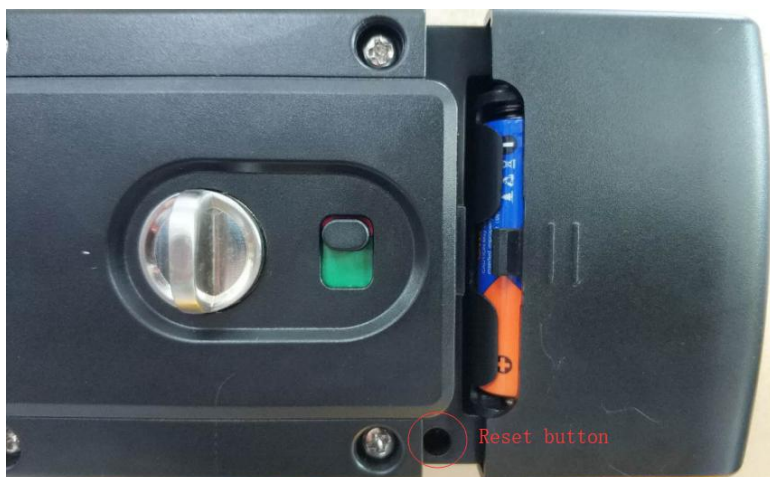

Press "Reset" button for 6 seconds → System initialization, recover to factory default, admin code back to "000#"


4.Registration









4.1 Connect lock to the phone

- 1) Android mobile phone, please scan the QR code as above
- 2) Apple mobile phone, please search “TTlock” from App Store.
- 3) Register a new account (phone number or email) or login with an existing account.
- 4) Touch the lock screen, click "+ Add Lock”
- 5) The lock nearby will appear on the phone screen, Click "+"
- 6) Re-name the lock
- 7) The lock added successfully

The screenshot shows the login screen of the TTLock app. At the top, there is a blue header with the text "Login" and "Register". Below the header is a blue icon of a hand holding a key. Underneath the icon, there are two input fields: the first one contains the phone number "18520265893" and the second one contains a masked password ".....". Below the input fields is a large blue button labeled "Login". At the bottom of the screen, there is a link that says "Forgot Password?".

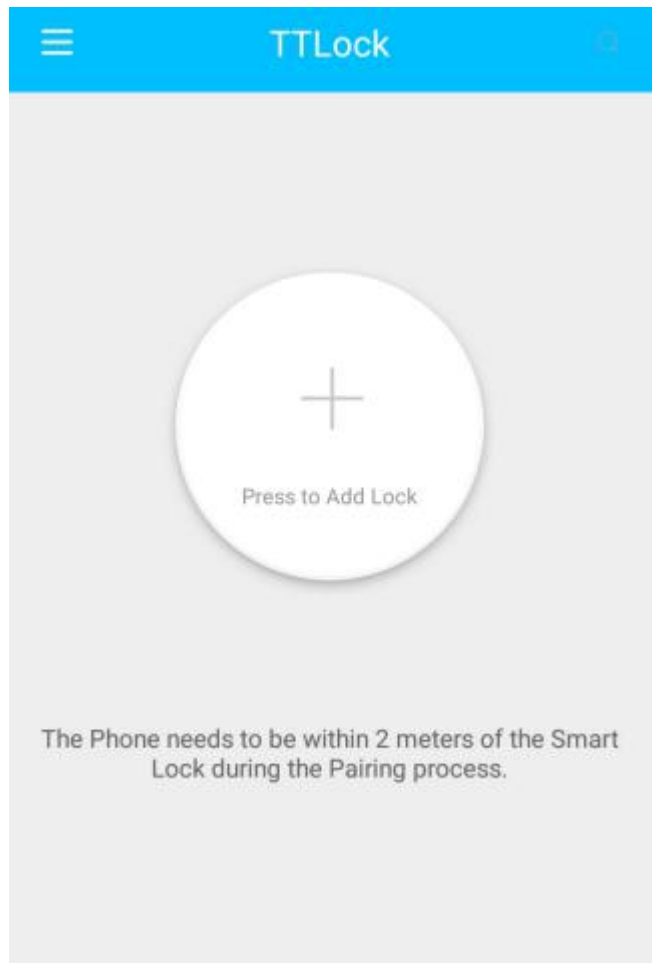

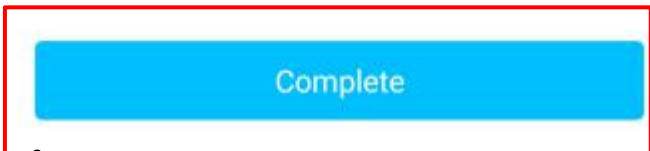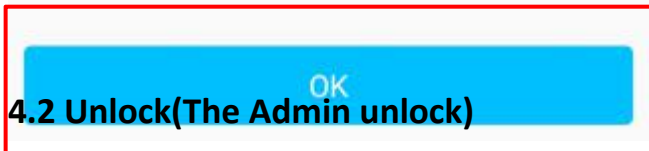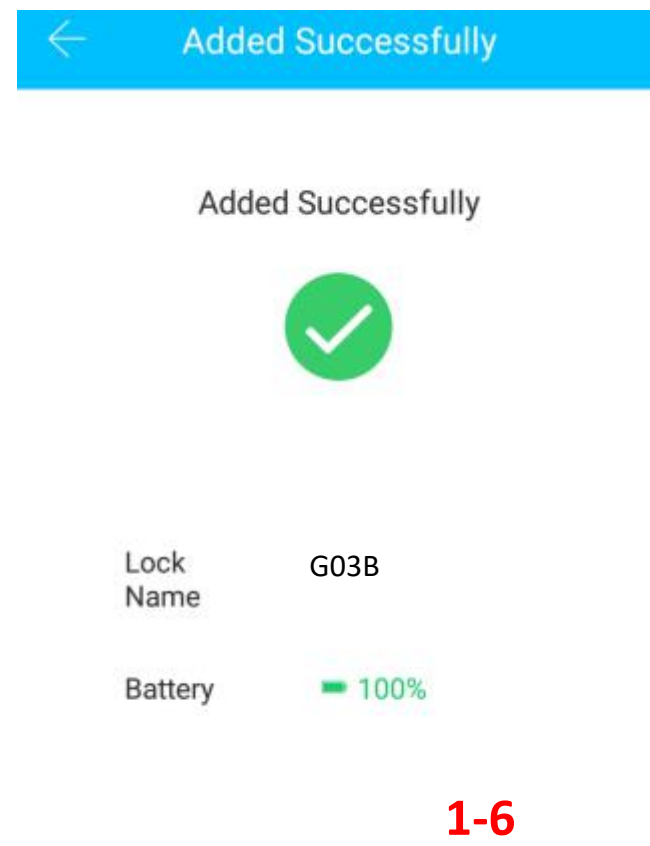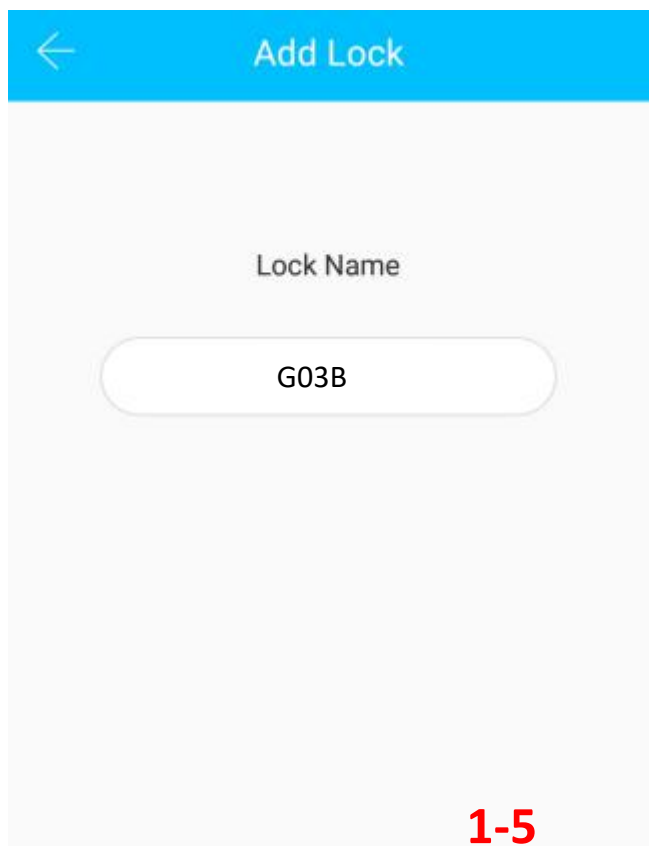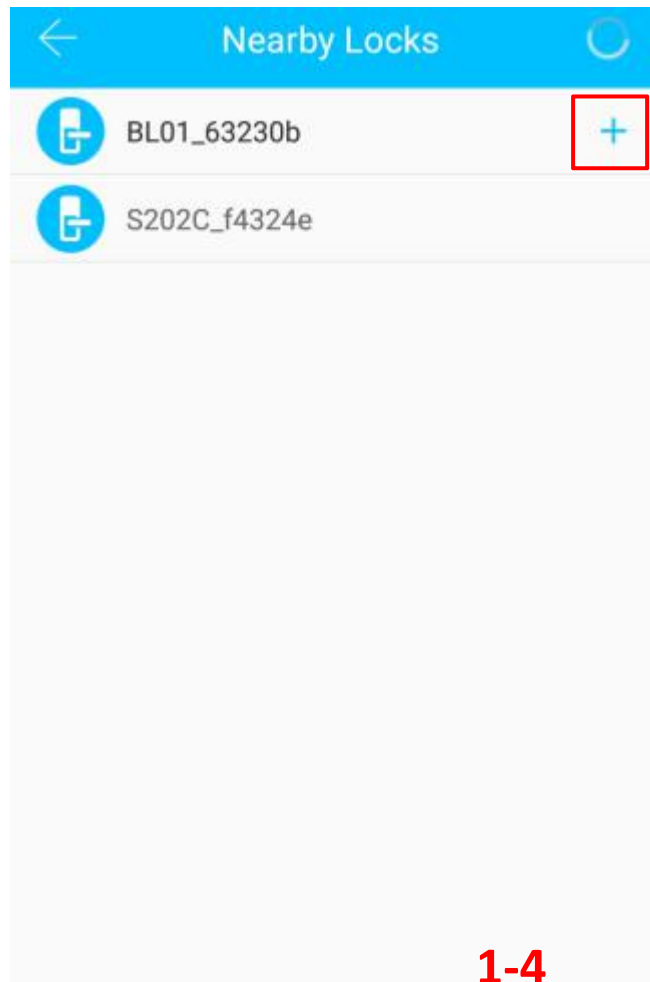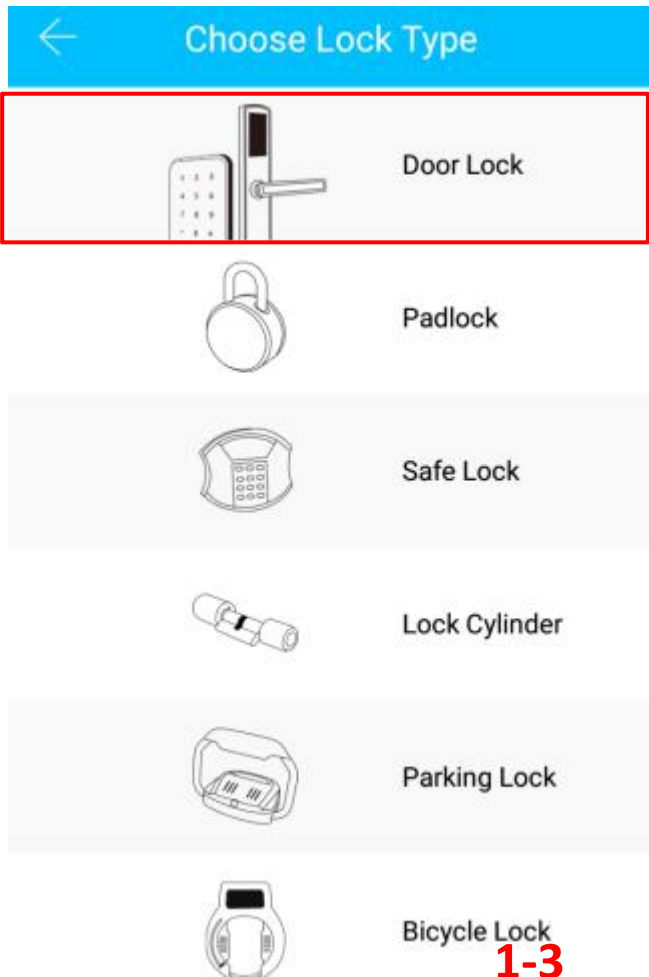



4.2.1 Bluetooth unlock

After mobile phone and door lock connected,Click " " as show as figure2- 1 to unlock.(the phone is within 5meters from the door lock)


4.2.2 remote control unlock(**Option**)

After confirming that your phone and door lock are connected to the gateway,Click " " as show as figure 2-1 to unlock.You can unlock it anywhere you have a network.(How to set up the gateway to connect to your phone refer to step 5.3)


4.2.3 Bluetooth key remote authorization

Click on the " " as shown in figure 2-1,you can send the eKey to other users of TTlock to authorize the unlock (the receiver must be download the APP and resiter an account) → Enter recipient's account of TTlock,set the name and effective time of the eKey as shown in figure 2-2 → Send → The recipient's account has bluetooth unlock permission


4.2.4 The Admin password unlock

Click " "as shown in figure 2-1→See Admin passcode as shown in finger2-3→input passcode on the keypad of lock →" # " to unlock.



4.2.5 Dynamic password unlock

Click " "as shown in finger 2-1→finger 2-4 You can set the effective time and effective number of passwords→Generate password→Input password to unlock.

4.2.6 unlock records







Click " "as shown in finger 2-1→you can query your unlock record as shown in finger 2-5

4.2.7 Fingerprint unlock

Click "  " as shown in finger 2-1 → Click "  " → Add Fingerprint → set the name and effective time of the fingerprint → Start → Place your finger on the sensor follow the instructions → Add fingerprint OK → Place your fingerprint on the sensor to unlock.

4.2.8 Fingerprint unlock

Click "  " as shown in finger 2-1 → Click "  " → Add IC Cards as shown in finger 2-6

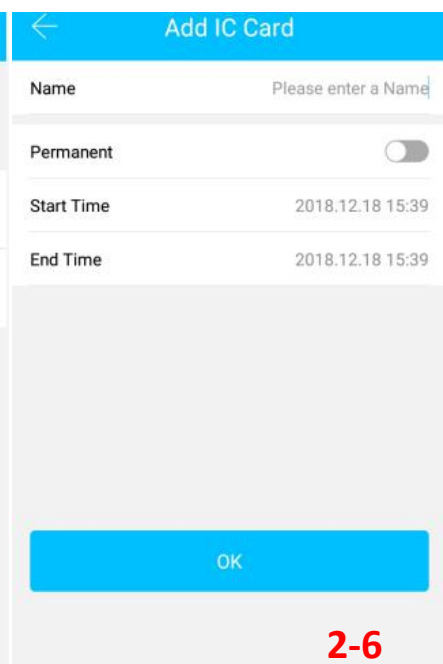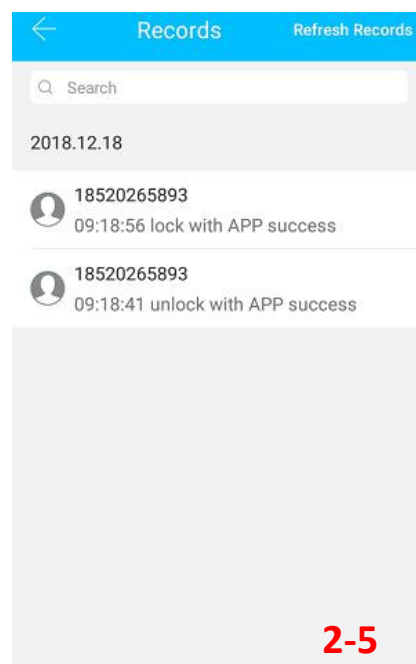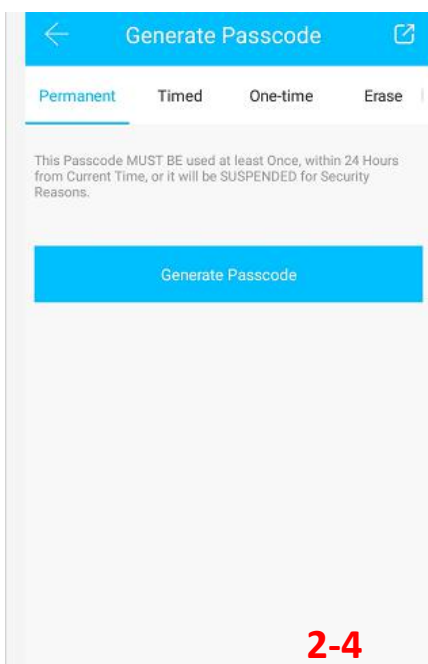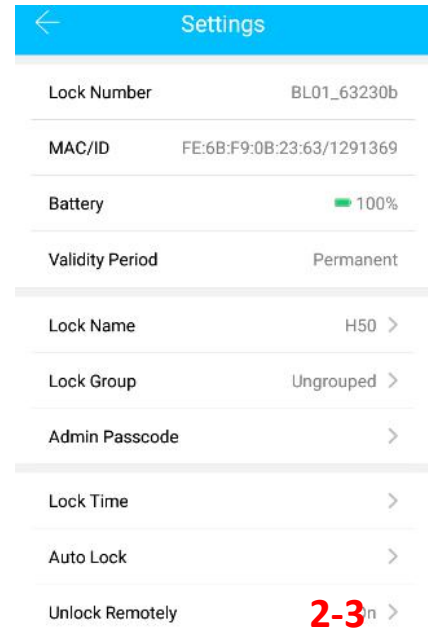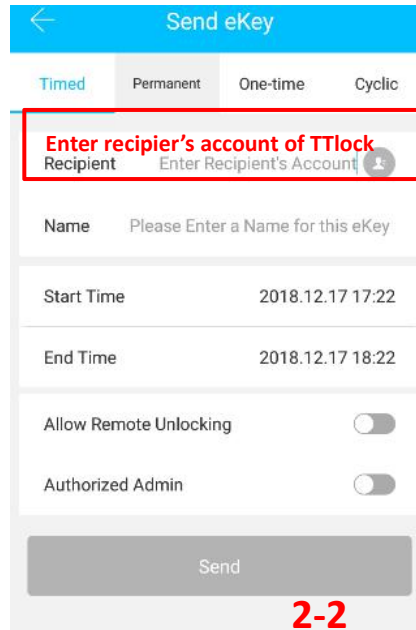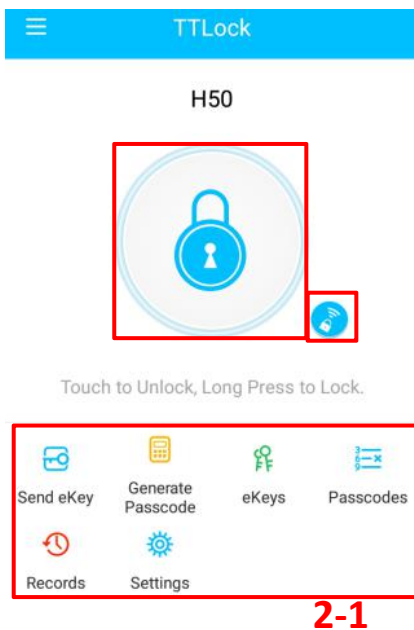




4.3 Set up the connection between the gateway and the phone(Option)

Light Status




When the gateway is powered on:


-  Light flashes alternately in red and blue:
Stand-by mode, ready for pairing
-  Blue light: Working mode
-  Red light: Network failure

Pair the Gateway with APP


1 Activate the APP

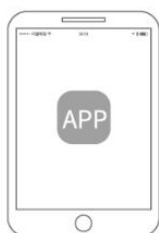

2 Press "☰"

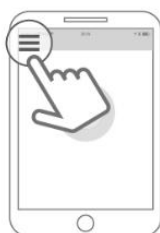

3 Select [Gateway]

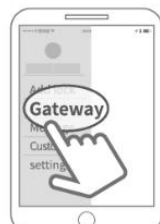

7 Add Gateway




8 Select the network and fill in the password




9 Add complete

4 Select [G2]

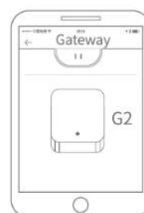

 5 Plug in the gateway and power it on, while the light flashes alternately in red and blue


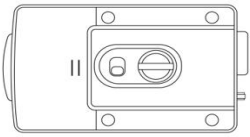
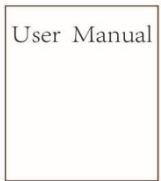
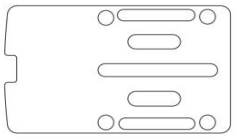





 




6 Press "+" sign



⚠ Notice: If times out, please power off and try it again.

Packing List

Picture				
Name	Front Panel	Rear Panel	User Manual	Fixed iron plate
Quantity	1	1	1	1
Picture				
Name	Strike Box	Strike Box Plate	Mechanical Key	Card
Quantity	1	3	2	2
Picture				
Name	Screw 01	Screw 02	Screw 03	Screw Casing
Quantity	3	4	2	1

Guarantee

Customer name: _____

Customer calls : _____

Purchase date : _____

Product name : _____

Product model : _____

Note:

- 1) please keep this card so that you can use it when you need warranty service.
- 2) we provide you with a one-year warranty from the date of purchase.
- 3) this warranty service is valid for customers in any country in the world.